




Do not drill or damage side airbag. It is the responsibility of the installer to ensure airbag is not damaged during or after installation.

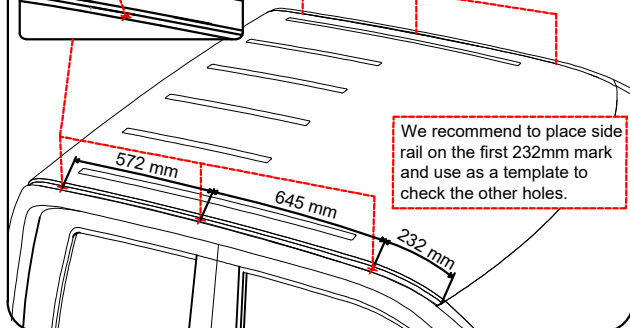


We recommend to place side rail on the first 232mm mark and use as a template to check the other holes.

- 33 M8 X 25 Alen Cap X6
- 22 M8 WASHER X6
- 36 M8 Threaded Rivet X6

1- Use SEALANT around all roof holes, before and after place M8 Threaded Rivet, to protect and seal.
2- Clean the sealant excess after placement of roof brackets.

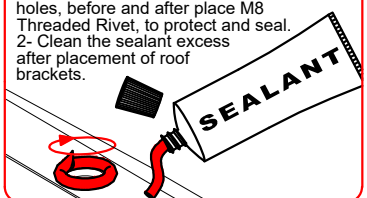


Fit side under rails with Alen cap M8 on drilled holes and tighten.

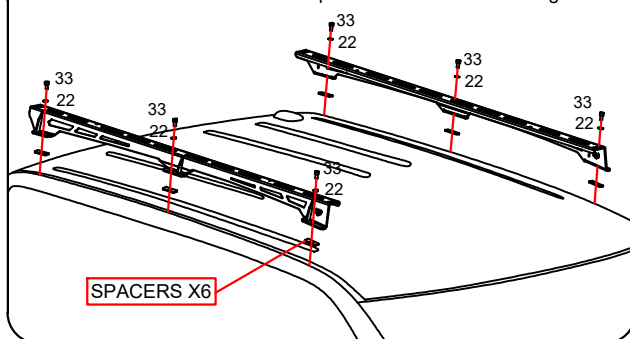


RAM 1500 CREW CAB 104035



After under rails have been fitted, place roof rack up to side under rails brackets, and fasten as per following diagram

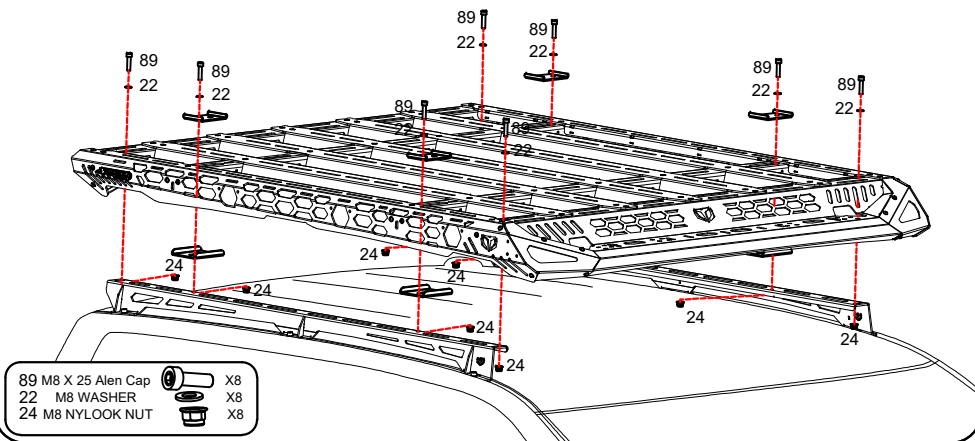


- 89 M8 X 25 Alen Cap X8
- 22 M8 WASHER X8
- 24 M8 NYLOOK NUT X8

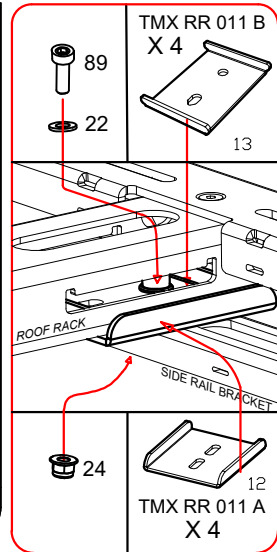

- TMX RR 011 B X 4
- 89
- 22
- 13

- 24
- 12
- TMX RR 011 A X 4

Tighten all M8 Allen cap bolts and M8 nuts using 6mm Allen key and 13mm Wrench.

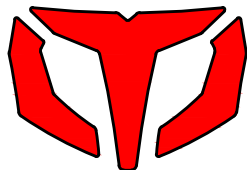

TMX RR 104034 SET BOLT KIT			
Item №	Part	Description	Qty
24	M8 1,25 flange nylock nut		8
33	M8 1.25 X 25 ALEN CAP		6
22	M8 washer		14
36	M8 Threaded Rivet		6
89	M8 1.25 x 35 Alen Cap		8

DONE!

